


OPERATING INSTRUCTIONS for FE 1046 BULK SKIP

1. Intended Use

The bulk skip FE 1046 is designed to transport bulk material. There are four crane lugs on the upper side of the skip to attach a four-strand hoist chain.


2. First use

The bulk skip FE 1046 is delivered fully assembled. According to accident prevention regulations, the bulk skip may only be put to use after it has been inspected by a suitably qualified person and after all defects found in the inspection have been rectified.

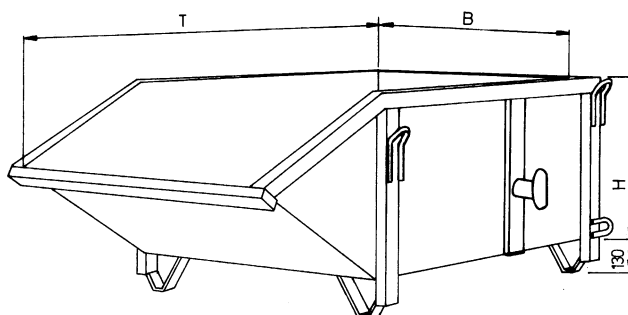

3. Load capacity

Do not exceed the load capacity specified on the type plate.

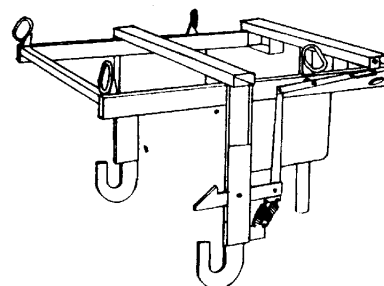

4. Operation

To tip the skip over, unhook all four chains from the crane lugs. Then hang two chains to the crane lugs on the lower part of the skip at the back. Lift the skip with the hoist and the skip will tip forward.

5. Maintenance

Grease the joint bolts and make sure they move smoothly. Check that the skip is not deformed.

According to safety regulations, the bulk skip must be inspected by a specialist at least once a year or more often depending on the conditions of use and on the owner's needs.

Inspections should focus on signs of wear, deformations, tears, cracks and traces of rust.